

Alcatel-Lucent 8340 Smart IP-DECT AP

Installation Manual

Alcatel, Lucent, Alcatel-Lucent and the Alcatel-Lucent logo are trademarks of Alcatel-Lucent. All other trademarks are the property of their respective owners. The information presented is subject to change without notice. Alcatel-Lucent assumes no responsibility for inaccuracies contained herein.

Copyright© 2013 Alcatel-Lucent. All rights reserved.

Regulatory information European Union***Declaration of Conformity***

This equipment is in compliance with the essential requirements of R&TTE Directive 1999/5/EC. The Declaration of Conformity may be obtained from your installer.

PRODUCT DISPOSAL INFORMATION (EN)**For countries in the European Union**

The symbol depicted here has been affixed to your product in order to inform you that electrical and electronic products should not be disposed of as municipal waste.

Electrical and electronic products including the cables, plugs and accessories should be disposed of separately in order to allow proper treatment, recovery and recycling. These products should be brought to a designated facility where the best available treatment, recovery and recycling techniques is available. Separate disposal has significant advantages: valuable materials can be re-used and it prevents the dispersion of unwanted substances into the municipal waste stream. This contributes to the protection of human health and the environment.

Please be informed that a fine may be imposed for illegal disposal of electrical and electronic products via the general municipal waste stream.

In order to facilitate separate disposal and environmentally sound recycling arrangements have been made for local collection and recycling. In case your electrical and electronic products need to be disposed of please refer to your supplier or the contractual agreements that your company has made upon acquisition of these products.

For countries outside the European Union

Disposal of electrical and electronic products in countries outside the European Union should be done in line with the local regulations. If no arrangement has been made with your supplier, please contact the local authorities for further information.

Exposure to Radio Frequency (RF) Signals - All Countries:

This device with internal antennas must provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

Regulatory information United States

This device contains functions which are not operational in US territories

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device

must accept any interference received, including interference that may cause undesired operation.

Modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the equipment.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help."

Privacy of communications may not be ensured when using this equipment.

Exposure to Radio Frequency (RF) Signals:

This base station is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the OET Bulletin 65 Supplement C. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on the safety standards previously set by international standards bodies. These standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

This device with internal antennas must provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

Regulatory information Canada

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Exposure to Radio Frequency (RF) Signals:

This wireless device is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limit for exposure to radio frequency (RF) energy set by the Ministry of Health (Canada), Safety Code 6. These limits are part of comprehensive guidelines and established permitted levels of RF energy for the general population. These guidelines are based on the safety standards previously set by international standards bodies. These standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

This device with internal antennas must provide a separation distance of at least 20 cm from all persons.

This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

Privacy of communications may not be ensured when using this equipment.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Contents:

1 8340 SMART IP-DECT AP GENERAL 9

1.1 GENERAL 9

1.2 COUNTRY SELECTION 9

1.3 SITE REQUIREMENTS 10

1.4 TEMPERATURE RANGES 10

1.5 CABLE SPECIFICATIONS FOR 8340 Smart IP-DECT AP Types 11

1.6 CABLING SAFETY REGULATIONS 11

1.7 INTERNAL ELECTRICAL ISOLATION 12

1.8 G.729 DAUGHTER BOARD 12

1.9 VISUAL CHECK 12

1.10 HORIZONTAL OR VERTICAL MOUNTING 12

1.11 INSTALLATION PROCEDURES 13

1.12 UNPACKING 14

2 ADJUSTING THE ANTENNA POSITION 15

3 MOUNTING THE G.729 DAUGHTERBOARD 19

4 MOUNTING THE 8340 Smart IP-DECT AP AGAINST A WALL/CEILING 21

5 LEDs 24

5.1 LED Status 24

5.2 LED Colours 25

A SPECIFICATIONS 26

PREFACE

This manual is applicable for the 8340 SMART IP-DECT AP, DECT Transceiver.

Please note that some product models or features described in this manual may not be available in all world regions.”

No legal rights can be obtained from information in this manual.

Important:

The equipment described in this manual should be installed and maintained only by professional and qualified engineers in accordance with the procedures and instructions described in this manual.

1 8340 SMART IP-DECT AP GENERAL

1.1 GENERAL

This installation Manual is valid for installing a DECT transceiver (8340 Smart IP-DECT AP) to a wall in horizontal or vertical position. The 8340 Smart IP-DECT AP is designed for indoor use. When installing an 8340 Smart IP-DECT AP outdoors, please use the dedicated Outdoor Cabinet and appropriate outdoor cabling

Note that there are two types of DECT Transceivers:

- **8340 Smart IP-DECT AP Integrated antennas.**
- **8340 Smart IP-DECT AP External antennas.**

Note: *The 8340 Smart IP-DECT AP External antennas must always be installed/used in the outdoor cabinet! For more information consult the manual for the Outdoor Cabinet for 8340 Smart IP-DECT AP.*

1.2 COUNTRY SELECTION

Country settings are pre-determined by the DAP Controller and this ensures that the 8340 Smart IP-DECT AP only operates according to local country regulations. It is not possible for any 3rd party or end user to alter these settings or download software that controls the RF parameters.

The variant sold in each country can only operate in the frequency band allowed in that country. This is ensured by only delivering the correct DAP controller version for each country.

When the **OmniPCX Enterprise** is used with the DECT Access Points, there are three types of DAP Controllers available for the 8340 Smart IP-DECT AP:

- **DAP Controller – International.**
This version is used in EMEA countries and countries that use the European frequencies and power levels. In these countries, only the DAP Controller - International will be delivered, so no other frequencies than the European frequencies and power levels are possible in this region.
- **DAP Controller - North America**
This version is used in North America and can only use the North American frequencies and power levels. In these countries, only the DAP Controller – North America will be delivered, so no other frequencies than the North American frequencies and power levels are possible in this region.
- **DAP Controller - Selective Countries.**
This version is used in countries with frequency ranges other than EMEA or North America.

Note: *In North America, only the “DAP Controller - North America” will be delivered, so no other frequencies than the North America frequencies and power levels are possible in North America.*

Note: *In Europe, only the “DAP Controller - International” will be delivered, so no other frequencies than the European frequencies and power levels are possible in Europe.*

When the **OmniPCX Office** is used with the DECT Access Points, there is only one type of DAP Controller available for the 8340 Smart IP-DECT AP. This DAP Controller is worldwide and integrated in the OmniPCX Office.

1.3 SITE REQUIREMENTS

Usually the Cabinets will be fixed to existing walls in the positions determined by the Site Survey.

Do not mount the 8340 Smart IP-DECT AP to a metal wall!

1.4 TEMPERATURE RANGES

The temperature ranges of the 8340 Smart IP-DECT AP:

- Temperature range 8340 Smart IP-DECT AP: 0° to 45° C.

The 8340 Smart IP-DECT AP should not be exposed to sunlight!

The outside temperature range for the 8340 Smart IP-DECT AP (all types) mounted in the Outdoor Cabinet is as follows:

- Minimum outside temperature: -20° C
- Maximum outside temperature: 45° C

The Outdoor Cabinet should not be exposed to sunlight!

1.5 CABLE SPECIFICATIONS FOR 8340 Smart IP-DECT AP Types

The cabling to the 8340 Smart IP-DECT AP External antennas should be “Category 5” or “Category 6” Ethernet cabling. The interface is defined as an SELV interface according EN60950-1. For this reason the safety restriction as given in the next chapter should be respected:

The power for the 8340 Smart IP-DECT AP External antennas must be supplied via the Ethernet cable, PoE (IEEE 802.3af). There is no room for a Mains Power adaptor inside the Outdoor Cabinet.

Note: “Category 7” cabling is not supported!

Note: PoE source must comply with clause 2.5 (Limited Power Source) per EN 60950-1

1.6 CABLING SAFETY REGULATIONS

Please read the following notes carefully:

Note: When you are going to install an 8340 Smart IP-DECT AP External antennas outdoors, it should always be installed in an Outdoor Box.

Note: The cabling and/or the 8340 Smart IP-DECT AP External antennas may never be exposed to over-voltages (e.g. lightning) without proper protection.

Therefore mind the following notes:

Note: When the 8340 Smart IP-DECT AP is installed in the Outdoor Cabinet, and the Outdoor Cabinet is mounted against a wall, lead the cable directly indoors. This avoids that the cable becomes sensitive to over-voltage. In that case, no lightning protection is needed. It is strongly recommended to use shielded Cat 5 cable. Make sure that the shield of the cable is connected to a proper “ground”.

Note: When the 8340 Smart IP-DECT AP is installed in the Outdoors and cabling runs outdoors, the cabling will be exposed to lightning and over-voltage. You must use lightning arrestors/protectors which comply with the local regulations and legislation. Furthermore, the cabling outdoors, must be shielded Cat. 5 cabling. Make sure that the shield of the cable is connected to a proper “ground”.

1.7 INTERNAL ELECTRICAL ISOLATION

The 8340 Smart IP-DECT AP external antennas provides internal isolation (1,5 kV) between the Ethernet connection and the internal electrical components, including the antenna's and antenna connector in the 8340 Smart IP-DECT AP external antennas in the 8340 Smart IP-DECT AP.

1.8 G.729 DAUGHTER BOARD

By default the G.729 Daughter Board is installed on the 8340 Smart IP-DECT AP. The 8340 Smart IP-DECT AP does support the G.729 codec, G.711u law and G.711a law.

Installation of the Daughter Board is described in [chapter 3. MOUNTING THE G.729 DAUGHTERBOARD](#).

1.9 VISUAL CHECK

The equipment must be carefully unpacked and examined for any visible sign of damage.

Anything not in order should be reported back to the supplier, as soon as possible, to avoid delays during installing due to missing equipment.

1.10 HORIZONTAL OR VERTICAL MOUNTING

The 8340 Smart IP-DECT AP can be mounted horizontally or vertically. When mounting vertically, you don't need to change the antenna position.



Figure 1. 8340 Smart IP-DECT AP in vertical position.

When the 8340 Smart IP-DECT AP is mounted horizontally, the antenna position must be changed (see chapter 2).



Figure 2. 8340 Smart IP-DECT AP mounted horizontally

1.11 INSTALLATION PROCEDURES

The installation of an Outdoor Cabinet comprises the installation of:

- Adjusting the Antenna position (if necessary).
- Mounting the G.729 Daughter Board (if applicable)
- Mounting the 8340 Smart IP-DECT AP against the wall.
- Connecting directional antennas, if necessary.

Note: *The minimum distance between 8340 Smart IP-DECT APs (DECT Access Points) must be more than 1 meter. (However, it is strongly recommended to respect a minimum distance of 5 meters between the 8340 Smart IP-DECT APs.)*

1.12 UNPACKING

PROCEDURE: “Unpacking”.

Actions

1. Open the card board box and take the 8340 Smart IP-DECT AP out.
2. Check the 8340 Smart IP-DECT AP for any damage.
3. Continue with one of the following Chapters:
 - When you mount the 8340 Smart IP-DECT AP vertically, the antenna position will normally be OK, and when you do not need to install the G.729 Daughter Board, continue with [Chapter 4 MOUNTING THE 8340 Smart IP-DECT AP AGAINST A WALL](#).
 - When you mount the 8340 Smart IP-DECT AP horizontally, you must change the antenna position. Consult [Chapter 2. ADJUSTING THE ANTENNA POSITION](#).
 - When you require G.729 codec support, you will have to install the G.729 Daughter Board. Consult [Chapter 3. MOUNTING THE G.729 DAUGHTERBOARD](#).

2 ADJUSTING THE ANTENNA POSITION

This chapter is not applicable for the 8340 Smart IP-DECT AP External antennas.

Note: *You only need to change the antenna position when you mount the 8340 Smart IP-DECT AP horizontally! In all other cases you don't need to change the antenna position.*



Figure 3. 8340 Smart IP-DECT AP mounted horizontally

PROCEDURE: “Adjusting the Antenna position”.

Note: *Antenna position can be changed once. You should not change it back!*

Actions

1. Remove the two screws from the rear side of the cabinet.


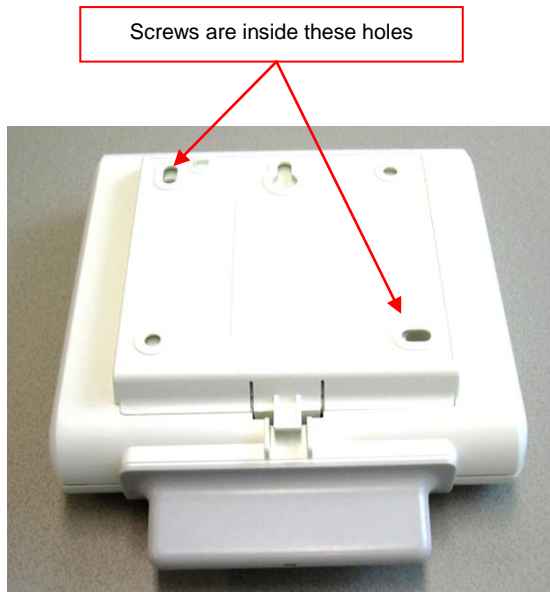


Figure 4. Rear side of Cabinet.

2. Open the cabinet CAREFULLY! Make sure that you shift the cover of the antenna's carefully from the antenna's.
3. Take the antenna cover from the 8340 Smart IP-DECT AP cover.
4. To put the antennas in vertical position, bend them **carefully** as shown in Figure 5. Bend Antennas carefully into vertical position.

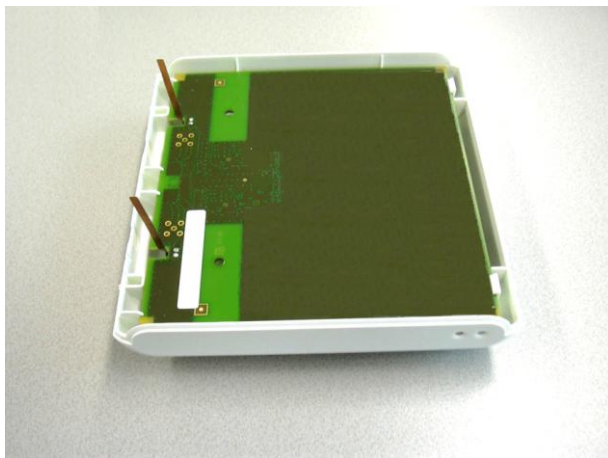

5. After the antennas are put in the vertical position, close the 8340 Smart IP-DECT AP cabinet again. In other words, put the 8340 Smart IP-DECT AP cover back into position and secure the screws at the rear side of the cabinet. See Figure 6. Antennas locked into Cover.

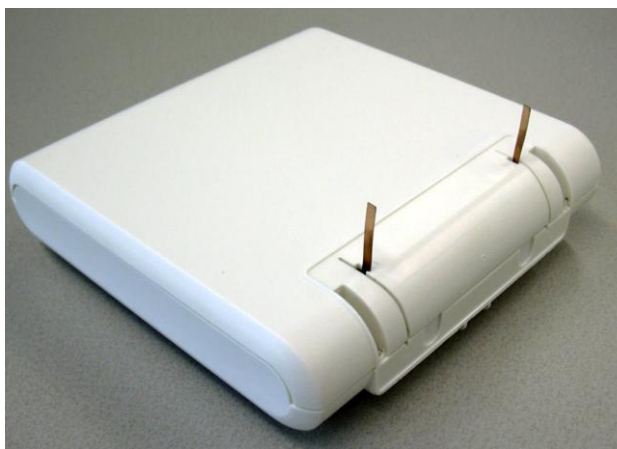


Figure 6. Antennas locked into Cover.

6. Make sure that the antennas are properly locked into the locks in the 8340 Smart IP-DECT AP cover.

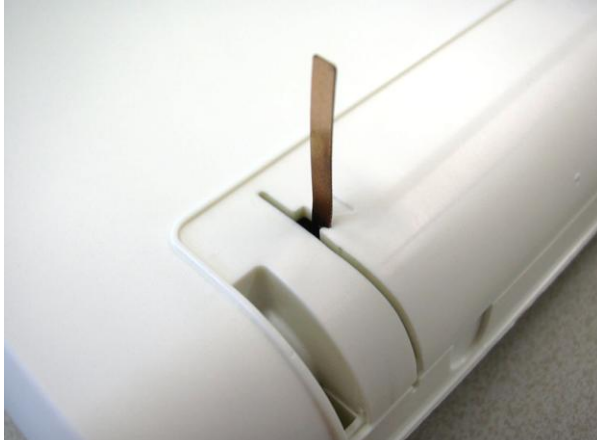


Figure 7. Detail of Antenna in lock.

7. Move the antenna cover carefully over the antennas in the vertical position and make sure that the antennas do not bend. When the antenna cover is in its position, push it further into its position in the 8340 Smart IP-DECT AP cabinet to fix it.



Figure 8. Cover installed.

8. Now your 8340 Smart IP-DECT AP is ready to be installed.

3 MOUNTING THE G.729 DAUGHTERBOARD

Follow the step-by-step procedure below, to install the G.729 daughter board.

PROCEDURE: “Installing the G.729 Daughter Board”.

Actions

1. Make sure that you have the G.729 Daughter board.
2. Open the cabinet. Use steps 1 and 2 in Chapter 2.
3. Take the PCB out of the cabinet.

Note: *Mind the light conductor for the LEDs. It can drop off!*

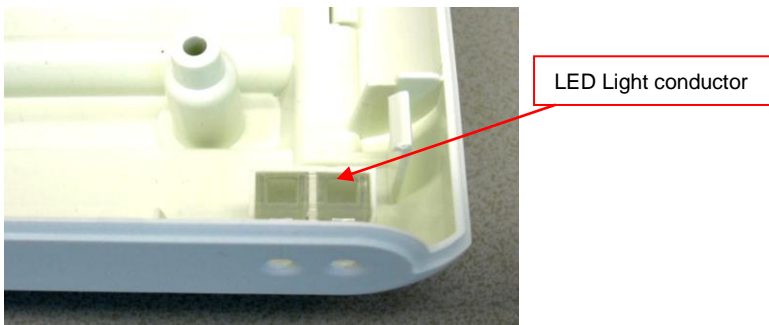


Figure 9. Light conductor for LEDs

4. Now you should have the 8340 Smart IP-DECT AP PWB and the G.729 Daughter Board as separate items.
5. Remove the protection foil from the sticky part on the G.729 Daughter Board.

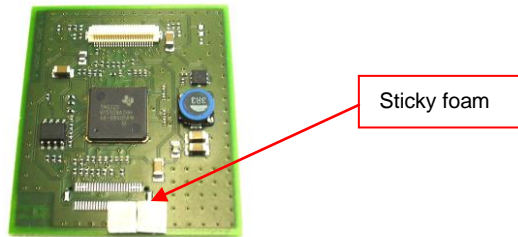


Figure 10. G.729 Daughter Board with sticky foam

6. Mount the G.729 Daughter Board onto the main PWB. Push the Daughter Board carefully onto the main board. The white connector should fit well. Make sure that the sticky part sticks to the Main Board.

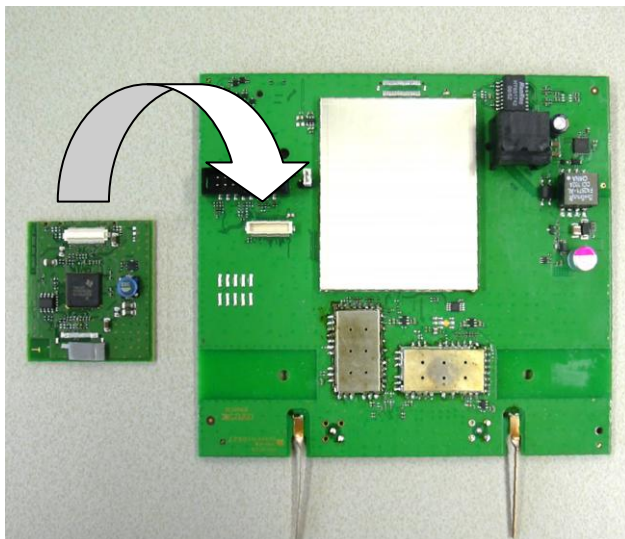


Figure 11. Mounting the G.729 Daughter Board onto the Main board.

7. Put the 8340 Smart IP-DECT AP together in the reverse order as it was disassembled, mounting the PCB into the cabinet and assembling the cabinet. Do not forget to mount the two screws back into the rear side of the cabinet.

4 MOUNTING THE 8340 Smart IP-DECT AP AGAINST A WALL/CEILING

PROCEDURE: "Procedure for mounting the 8340 Smart IP-DECT AP to the wall".

Actions

1. Remove the mounting plate from the 8340 Smart IP-DECT AP cabinet.

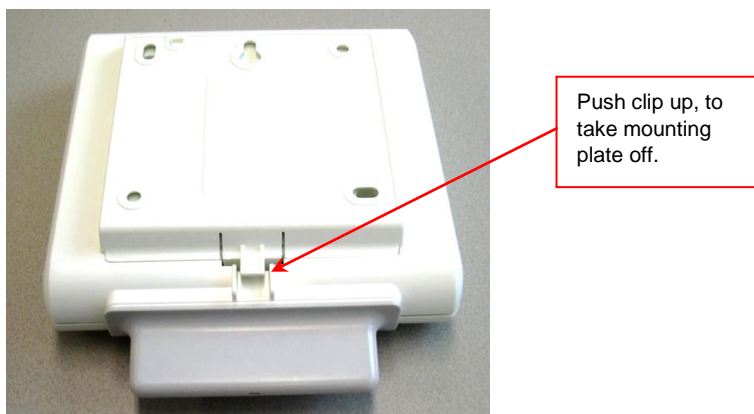


Figure 12. How to take the mounting plate off.

2. Mount the mounting plate to the wall or ceiling, using appropriate fittings.



Figure 13. Mounting plate..

3. Make sure that the Ethernet cable to the cabinet has the correct length.
4. If necessary, mount the RJ45 connector to the cable using the tool for mounting an RJ45 connector plug to a Category 5 or Category 6 cable.
5. Lead the cable to the 8340 Smart IP-DECT AP cabinet and connect the RJ45 connector. Push the cable into the groove.



Figure 14. Cable at rear side of the cabinet.

6. Push the cabinet onto the mounting plate.

Note: When pushing the 8340 Smart IP-DECT AP on to the mounting plate, make sure that you hear/feel a distinct click. This indicates that the 8340 Smart IP-DECT AP is firmly mounted to the mounting plate.

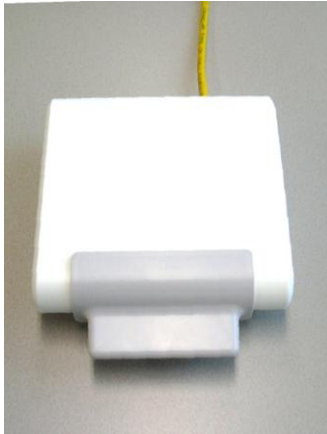


Figure 15. 8340 Smart IP-DECT AP mounted against the wall.

5 LEDs

5.1 LED Status

The 8340 Smart IP-DECT AP is equipped with two LEDs.

Top LED – Yellow

This LED represents the status of the 8340 Smart IP-DECT AP.

LED Status (Top LED, Yellow)	Meaning
Off	No power
0,5 seconds On - 0,5 seconds Off	Loading software/firmware
Short flash every 0,25 seconds	IP Network error (not connected, no DHCP/TFTP server, no DAP Controller)
Fast blink	DAP operational, but trying to synchronize to another DAP
Continuous fast blink	Hardware error
Steady On	DAP operational (and synchronized to other DAP or is the synchronization master).

Table 1. 8340 Smart IP-DECT AP LED Status on top LED

Lower LED – Red/Green

This LED is used to indicate the start-up and network status.

LED Status (lower LED, Red/Green)	Meaning
RED Steady on	Power but FPGA starting up
RED flashing	Trying to connect to the network
Green flashing	Network status display and showing network activity
Off	8340 Smart IP-DECT AP operational

Table 2. Lower LED status on the 8340 Smart IP-DECT AP.

5.2 LED Colours

The colour of the **top** LED might be different depending on the operational mode. The following operational modes are distinguished:

- **Normal (single band) mode**

In the normal single band mode, the top LED will be Yellow.

- **Dual Band Mode**

In Dual Band mode, the LED colour shows the operational frequency:

- Green : Europe/International
- Red : North America / USA

A SPECIFICATIONS

Dimensions / Environment:

- Dimensions (W x D x H): 145 x 43 x 174
- Outside temperature range.....: -5° C . . . 45° C
The 8340 Smart IP-DECT AP should not be exposed to sunlight.
- IP Specification: When in Outdoor Box = IP66
- Relative Humidity: 5 . . . 95 %

PoE Specifications:

- Voltage at 8340 Smart IP-DECT AP via PoE : 36 57 V. DC
- PoE Class: Class 2
- Power Consumption.....: 6 Watt maximum

Note: PoE source must comply with clause 2.5 (Limited Power Source) per EN 60950-1

IP Specifications:

- IP Network: 10/100Base-T IEEE802.3
- Connector:: RJ45
- Cable: Cat 5 / Cat 6 UTP.
Cat 7 is not supported.
- IP Version: IPv4
- DHCP/TFTP support: Yes
- Quality of Service: IEEE802.1Q, IEEE802.1P

Audio CODEC:

- 8340 Smart IP-DECT AP:.....: G.711
- 8340 Smart IP-DECT AP with Daughter Board : G.711 and G.729

Country/Region support:

- EMEA.....: 1880 – 1900 Mhz
- Latin America.....: 1910 – 1930 MHz
- Brazil.....: 1910 – 1920 MHz
- North America.....: 1920 – 1930 MHz (< 21 dBm power)

Note: *Country selection is determined by the DAP Controller Type! See section 1.2 COUNTRY SELECTION.*